

Ascent Wings

Installation Guide V1.1



Introduction

PV-ezRack Ascent Wings is widely used for PV-Module mounting on flat roofs. To make it robust and longevity, it is manufactured from aluminium alloy and stainless steel.

Please review this manual thoroughly before installing PV-ezRack Ascent Wings. This manual provides:

- (1) Simple introduction of the installation relating to PV-ezRack Ascent Wings Mounting systems;
- (2) Planning and installation instructions for PV-ezRack Ascent Wings.

The PV-ezRack Ascent Wings parts, when installed in accordance with this guide. During installation, and especially when working on the roof, please comply with the appropriate Occupational Health and Safety regulations. Please also pay attention to any other relevant State or Federal regulations. Please check that you are using the latest version of the Installation Manual, which you can do by contacting Clenergy via www.clenergy.com or contacting your local distributor.



The installer is solely responsible for:

- Complying with all applicable local or national building codes, including any updates that may supersede this manual;
- Ensuring that PV-ezRack and other products are appropriate for the particular installation and the installation environment;









List of contents

Introduction	01
Tools and Components	02
System Overview	03
Installation Instruction	05












- Using only PV-ezRack parts and installer supplied parts as specified by PV-ezRack project plan (substitution of parts may void the warranty and invalidate the letter of certification);
- During installation, ensure that the self-tapping screws and metal screw have sufficient strength and shear force;
- Keep the roof waterproof system intact;
- Recycling: Recycle according to the local relative statute;
- Removal: Reverse installation process;
- Ensuring that there are no less than two professionals working on panel installation;
- Ensuring the installation of related electrical equipment is performed by licenced electricians;
- The upper and lower limit of the torque of the locking screws must be checked regularly at least once a year.
- Changes and deviations from the planning documents must be approved by Clenergy.

Tools & Components

Tools

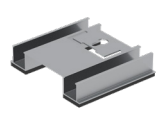			
Marker pen	Screw Driver	Torque (M6/M8)	Socket Wrench (13mm)
			
Allen Key 6mm (M8 Hexagon Socket Screw)	Tape	String	Drive Bit (6mm,10mm)

Components


			
EC-M End Clamp	IC-M Inter Clamp	SEB-AC/120 Start and End Base L120	MB-AC/EW Main Base, East-west
			
CB-AC/EW/250 Connection Base L250, East-west	FL-AC/10 FL-AC/15 Front Leg 10°/15°	RL-AC/10 Rear Leg 10°	RLE-AC Rear Leg Extension
			
ER-AA-50/XXXX/50 Angle AL	GC-DT Grounding Clip	EZ-GL-B Grounding Lug	

Note:

The tools in this chart are only used for installation of racking system (not included in supply scope), please consult system installation personnel about installation of electronic parts.

System Overview

Overview of PV-ezRack Ascent Wings system

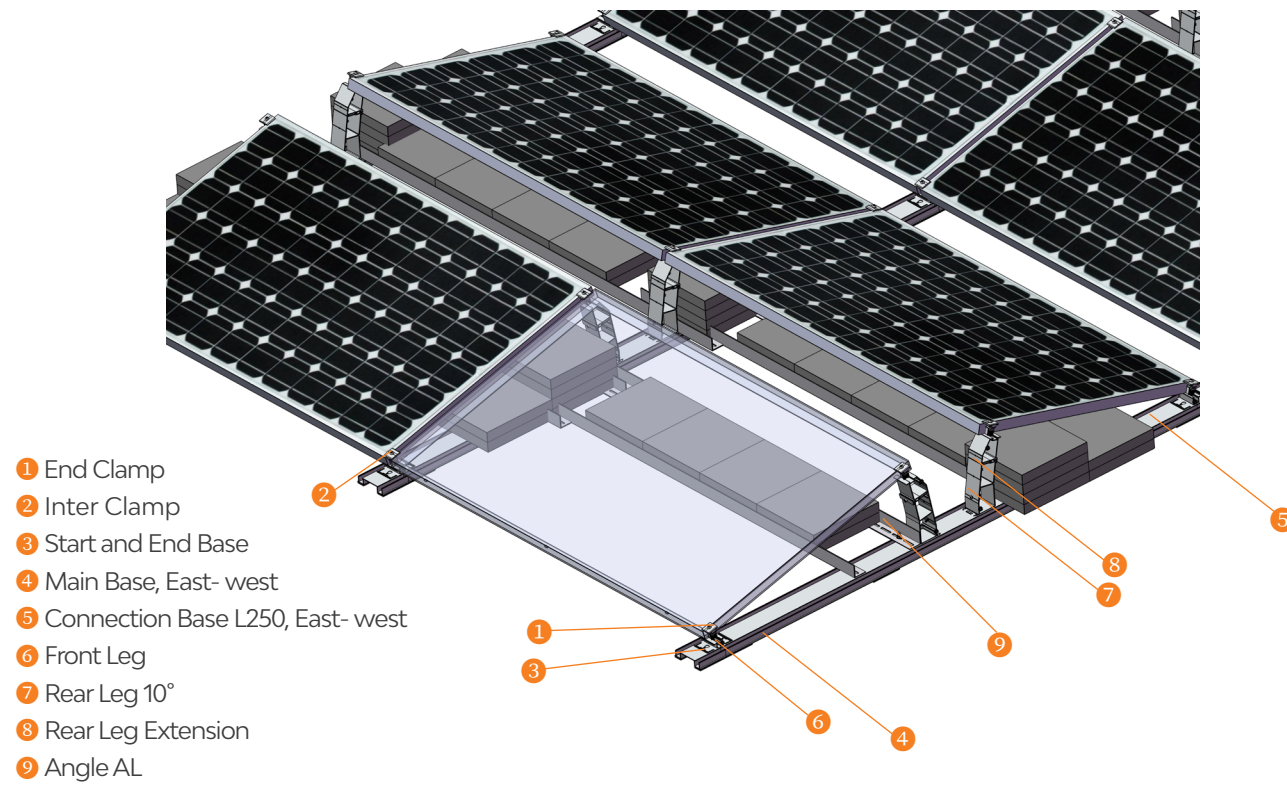

Precautions during Stainless Steel Fastener Installation

Improper operation may lead to deadlock of Nuts and Bolts. The steps below should be applied to stainless steel nut and bolt assembly to reduce this risk.


General installation instructions:

- (1) Apply force to fasteners in the direction of thread
- (2) Apply force uniformly, to maintain the required torque
- (3) Professional tools and tool belts are recommended
- (4) In some cases, fasteners could be seized over time. As an option, if want to avoid galling or seizing of thread, apply lubricant (grease or 40# engine oil) to fasteners prior to tightening.

System Overview

Safe Torques

Please refer to safe torques defined in this guide as shown below. If power tools are required, Clenergy recommends the use of low speed only. High speed and impact drivers increase the risk of bolt galling (deadlock). If deadlock occurs and you need to cut fasteners, please make sure that there is no load on the fastener before you cut it. Avoid damaging the anodized or galvanized surfaces.

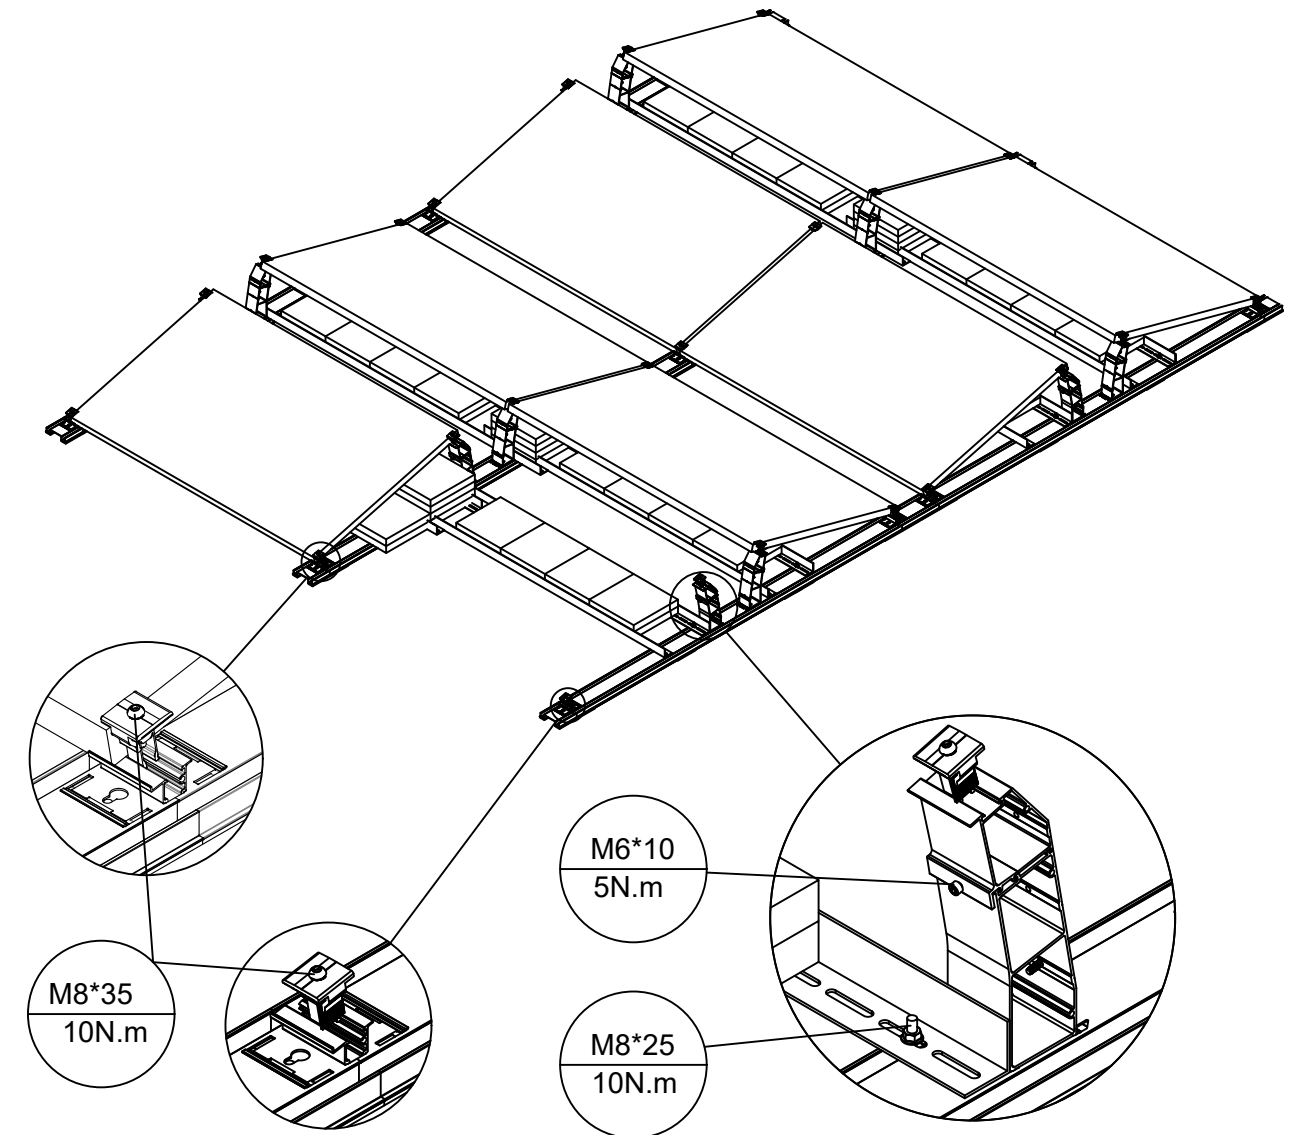


Installation Instruction


Mark the position of the Bases according to your plan.

Lay out the components, such as Start and End Base ③, Front Leg ⑥, Main Base ④ according to your plan.


The order of components in each row is: ③⑥④⑥⑤⑥④⑥③. And always end with Start and End Base at the end of the row.

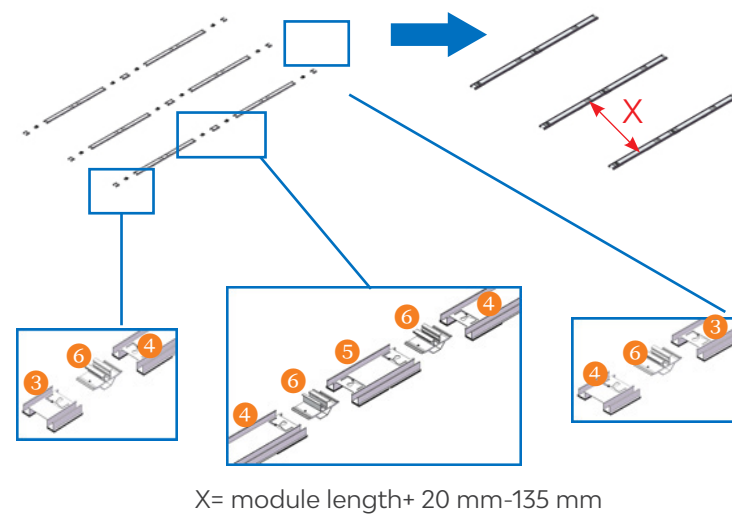

Connect the Base ③ / ④ / ⑤ with Front Leg using the method shown in the right figure.

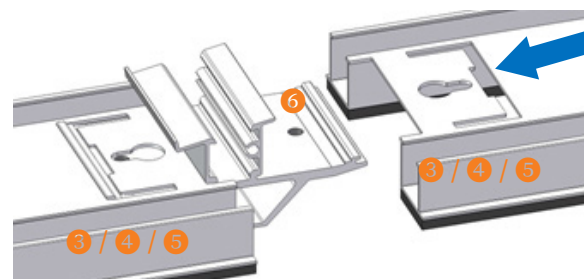


Place the Base on the marked position after installation.

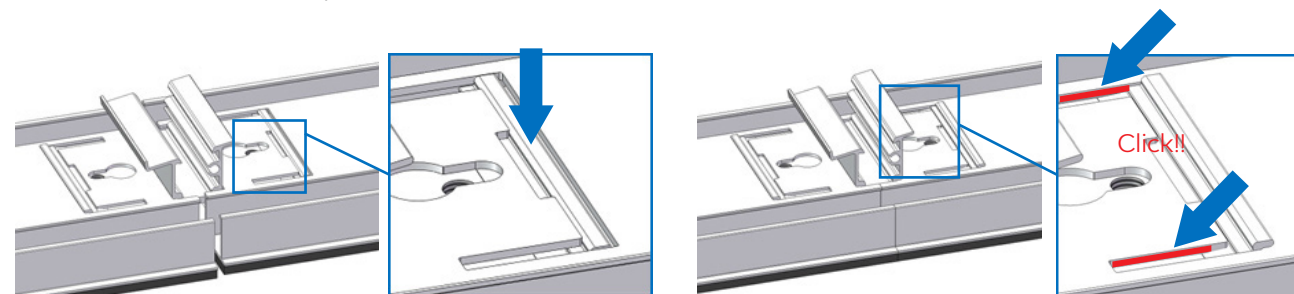


Rear Leg Installation

Install the Rear Leg ⑦ to the Main Base ④ using the method shown in below figure.

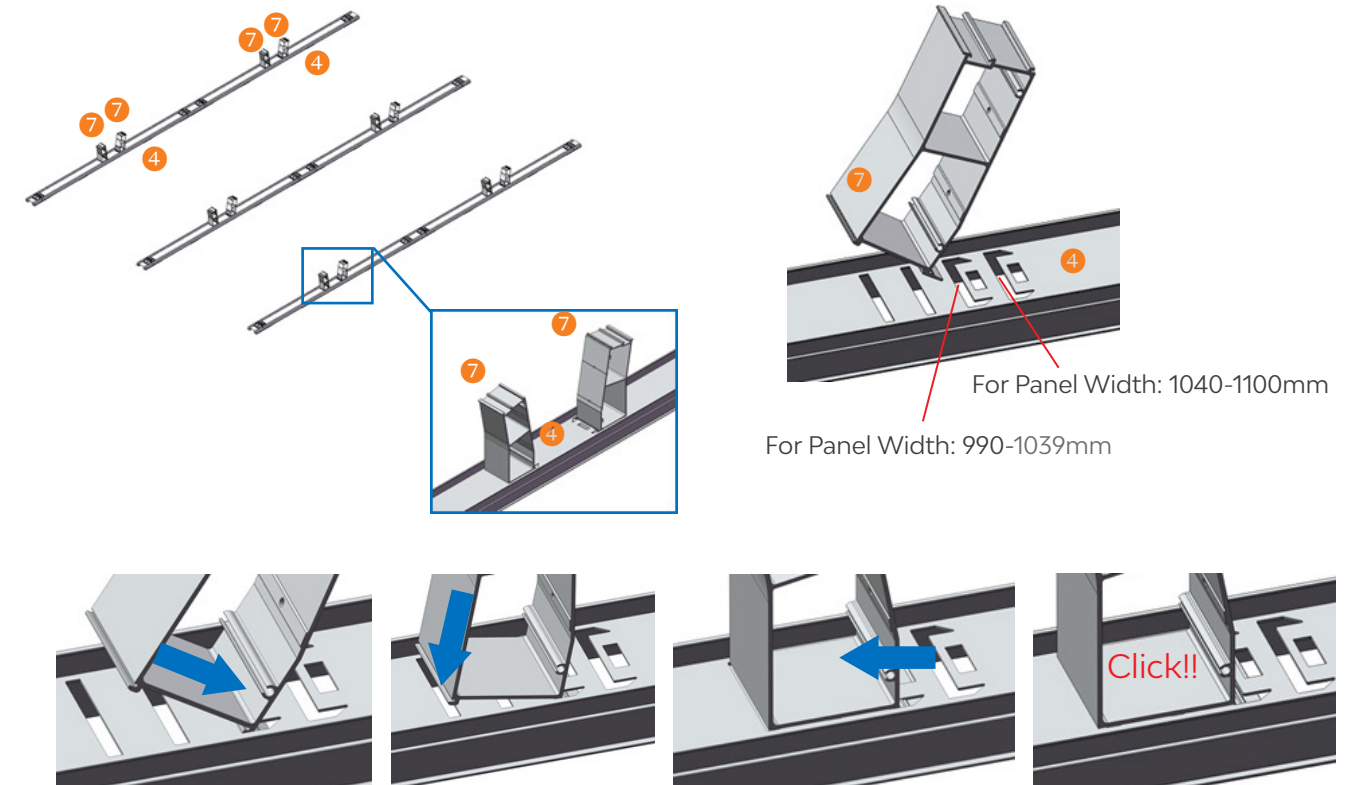


Rear Leg Extension Installation (For 15° system)

Install the Rear Leg Extension to the Rear Leg using the method shown in below figure. And then fix the M6*10 bolt with the torque of 5 N·m


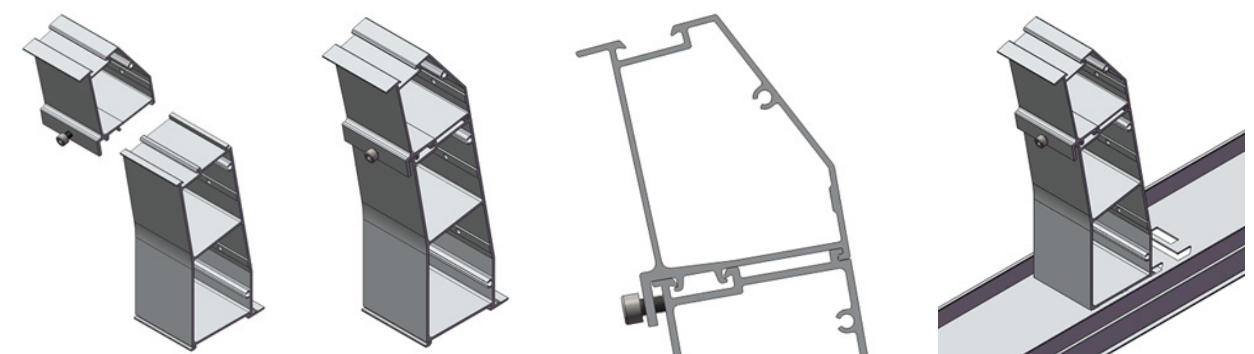


Placing the Ballast

Ballast per rail section.
Place the ballast centrally on Main Base.

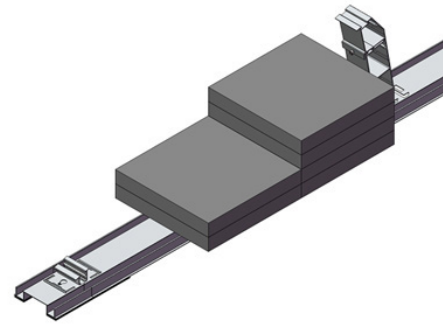


Ballast on double brace.
Place the ballast centrally on Angle AL when necessary.
Then fasten the nut with a torque of 10 N·m.

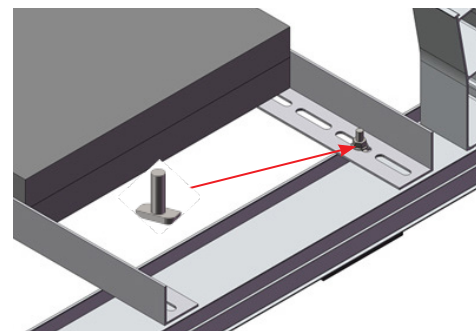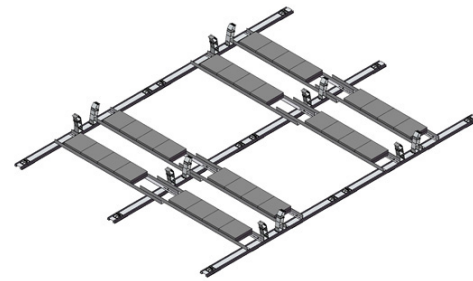


PV Modules Installation

Place the PV modules on the Front and Rear Leg. Leave a 20mm gap between PV modules for Inter Clamp.

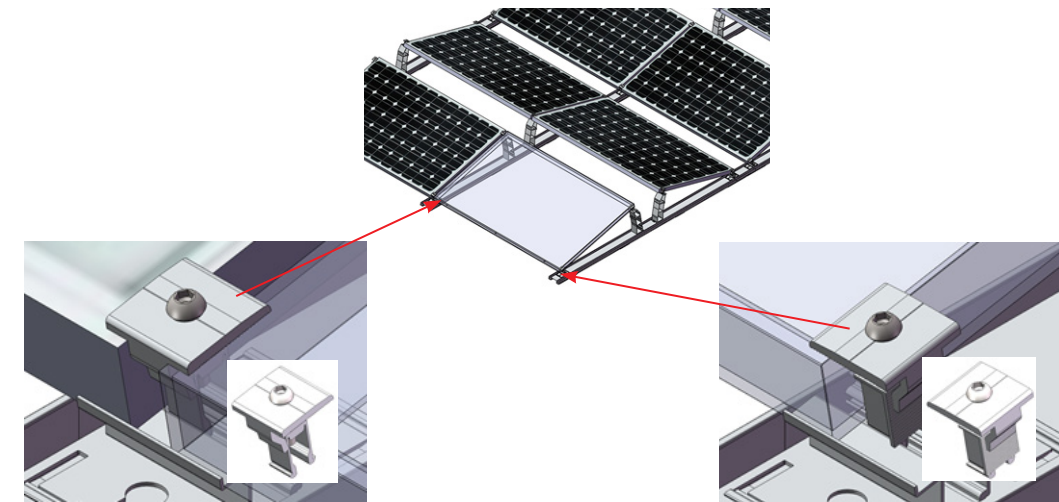

Incline the Inter and End clamp to fit the top channel of Front and Rear Leg.

Press the Clamp down to securely fit into top channel until you hear a clicking sound.
Fasten the hexagon socket screw with a torque of 10 N·m.

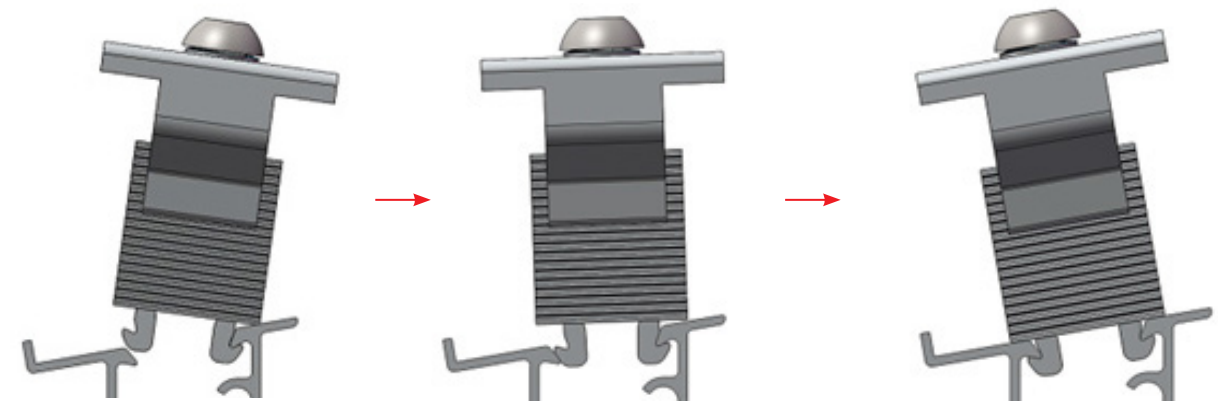

Grounding System Installation

Hexagon screw Installation

After the installation of Front Leg and Base, fasten Hexagon screws with the holes of front leg.

Note: It is required to install two Hexagon screws per Front Leg.



Grounding Clip Installation

Before module and clamps installation, it is important to arrange how to position grounding clips to achieve earthing continuity between each PV modules.

Place the PV modules on the Front and Rear Leg.

Incline the Inter and End clamp to fit the top channel of Front and Rear Leg.

Slightly lift the PV Module and slide Clamps and Grounding Clips into position. The teeth on Grounding Clip will automatically align when the Inter Clamp is properly installed as shown in figures on the right.

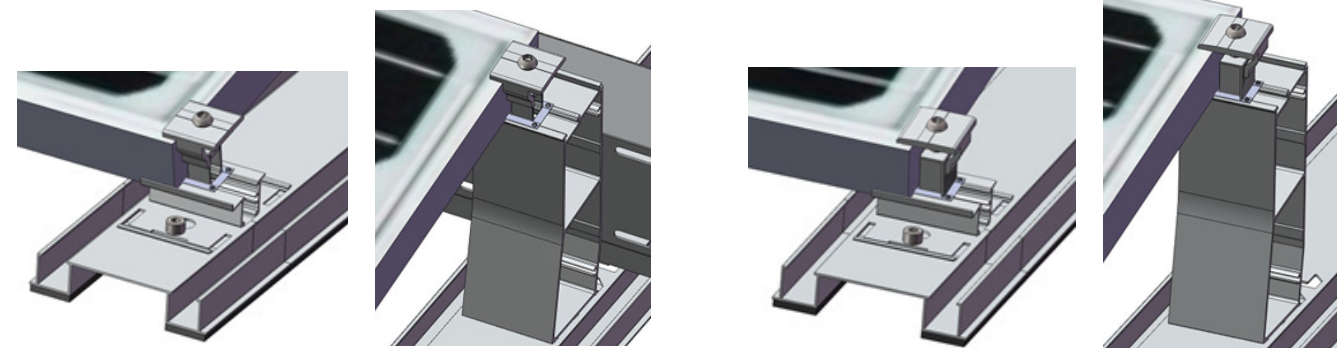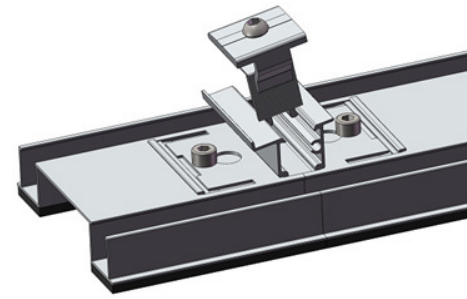

Install with Inter Clamp

Install with End Clamp


Grounding Lug Installation

It is required to install one Grounding Lug per row of base. The recommended fasten torque of the bolt M6*14 is 5-6 N·m.

Fix the Grounding lug on the end of base. Make sure the inner face of side opening of Grounding lug is closely attach to the base as shown in right figure.

Strip earthing cable, insert the conductor into the Grounding lugs.
Recommended Torque: 5-6N·m

Note: If the earthing cable is less than 4mm, decrease the Torque to protect it.

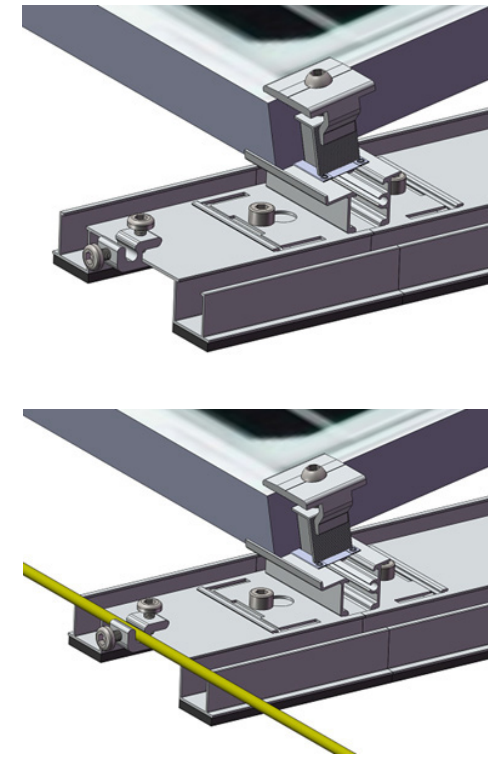

Final Inspection

Check that the complete system and all components have been installed according to the planning documents and that there are no deviations.

Check that all hexagon socket screws have been fastened according to the recommended torque (middle clamps, end clamps, Angle AL).

Check whether a sufficient weight of ballast has been applied in accordance with your plan.

Check all 'click connections' are correctly locked in place.








PV-ezRACK®

Clenergy

999-1009 Min'an Rd,
Huoju Hi-tech Ind. Dev. Zone
Xiang'an District 361101, Xiamen,
Fujian, China

Phone: +86 592 311 0088
Email: sales@clenergy.com
Web: www.clenergy.com

 @ClenergyGlobal / @ClenergyClub / @ClenergyAUS / @ClenergyThailand
 @Clenergy_global  @Clenergy  @Clenergy  @ClenergyClub

A Clenergy Technologies Company

